

## NEC IR REMOTE COMMAND [USER CODE = 00FF]

KEY	COMANNDNS	HEX	DEC	CMD
1	ON/OFF	1FE48B7	33441975	0X45
2	MODE	1FE58A7	33446055	0X46
3	MUTE	1FE7887	33454215	0X47
4	P/P	1FE807F	33456255	0X44
5	PREV	1FE40BF	33439935	0X40
6	NEXT	1FEC03F	33472575	0X43
7	EQ	1FE20DF	33431775	0X07
8	VOL-	1FEA05F	33464415	0X15
9	VOL+	1FE609F	33448095	0X09
10	0	1FEE01F	33480735	0X16
11	RPT	1FE10EF	33427695	0X19
12	U/SD	1FE906F	33460335	0X0D
13	1	1FE50AF	33444015	0X0C
14	2	1FED827	33478695	0X18
15	3	1FEF807	33486855	0X5E
16	4	1FE30CF	33435855	0X08
17	5	1FEB04F	33468495	0X1C
18	6	1FE708F	33452175	0X5A
19	7	1FE00FF	33423615	0X42
20	8	1FEF00F	33484815	0X52
21	9	1FE9867	33462375	0X4A

